

**Operating Instructions For Summit Operator Range, models SCT3, SCT4, SCT5; SC506 Range, model SCT506 & SC506/22 Range, model SCT506/22.**

All adjustments should be made whilst seated.

1. The overall height of the chair is adjusted by lifting the lever located below the middle of the seat on the right hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower, simply lift the lever, put your weight back onto the seat and release the lever at the desired height.
2. The angle of the back is adjusted by lifting the lever located below the back of the seat on the right-hand side. The back is locked at the required angle by pushing the lever down.
3. The height of the back is adjusted by loosening the hand wheel located behind the seat below the stem of the back. Simply lift the back to the required position and tighten the hand wheel.
4. The height adjustable arms have a button located on the outside face of the arm post. Press this button, set each arm at the desired position and release the button to lock.
5. The optional inflatable lumbar support is adjusted using the hand bulb hanging under the left hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.
6. If the chair is fitted with a seat slider, the seat depth can be adjusted by lifting the lever located below the middle of the seat on the left-hand side. Slide the seat forwards and backwards until the required position is achieved and release the lever to lock the seat in place.